


Custom Hearing Device

Volume Control

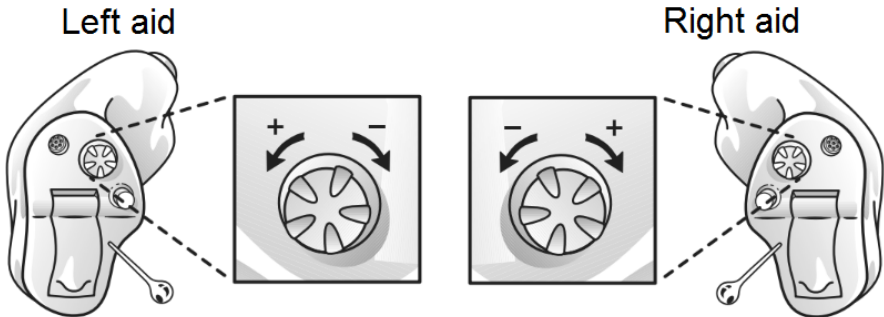

With the hearing aids in the ears, locate the volume wheel with the tip of a finger. For both right and left hearing aids:

Turning the wheel **TOWARDS** the face
INCREASES the volume.

Turning the wheel **AWAY** from the face
DECREASES the volume.

- While adjusting the volume, you will hear a short beep for each volume step
- A longer beep indicates you have reached the upper or lower volume limit
- The volume of the beeps can be adjusted or disabled by your audiologist.