


Custom Hearing Device

Programme Button

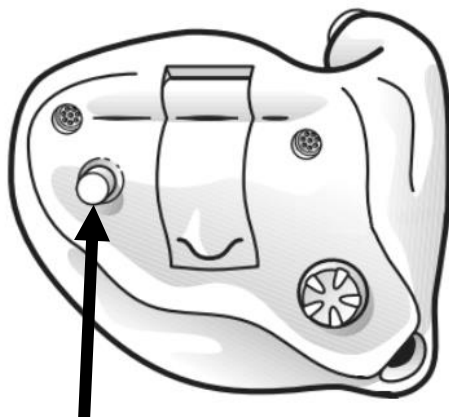


Programme Button

- Your audiologist can advise on any additional programmes that may have been activated in your hearing device.
- The programme button may be beside or above the battery door, depending on how your custom hearing device has been individually made.
- To change to the next programme, press the button once. You will hear one or more beeps.

- The number of beeps indicates which programme is selected (i.e. 1 beep = programme 1, 2 beeps = programme 2, etc.).

Example: For a hearing device set up with 3 programmes (e.g. All-Round, Restaurant & Music).

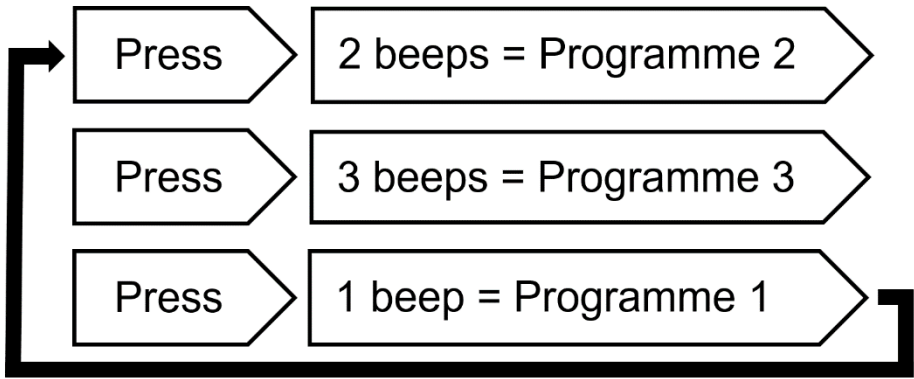

- If you cannot hear the beeps very well, your audiologist may be able to increase the volume of the beeps.
- The programme button works on a continuous scroll: once you have reached the last programme, pressing the button again will return the hearing device back to programme 1.
- When the hearing device/s are turned off and on again by opening and closing the battery door, the programme will always default to programme 1.